

05 Important Tips



Grass Too Tall? Trim First

Overgrown grass can slow me down—cut it to a manageable height first.



Rainy Day? Let It Dry

Moist grass affects performance—wait until it's dry for the best results.



Hidden Obstacles? Clear or Avoid Them

Hard objects like exposed rocks, tree roots, and drain covers can damage its blades—clear or avoid them before mowing.



Big Gullies? Smooth Them Out

Deep gaps may trap me—level uneven areas for smooth operation.



Large Debris? Remove Before Use

Big leaves and logs can block me—clear them for optimal performance.

The lawn mower operates best when cutting grass between 3–15 cm in height. To ensure an optimal experience, please trim any overgrown grass before use, fill in potholes, and remove loose gravel to prevent damage. If these conditions are met, there's no need to worry about the machine!

AIRSEEKERS
Effortless Living

CONTACT US

Website: www.airseekers-robotics.com

Email: support@airseekers.ai

Manufacturer: Guangdong Changyao Innovation Technology Co., Ltd


Address: 201, Building 1, No. 1322, Meijie Road, Xiangzhou District, Zhuhai



Scan the QR code for more languages and support

AIRSEEKERS
Effortless Living

Standard

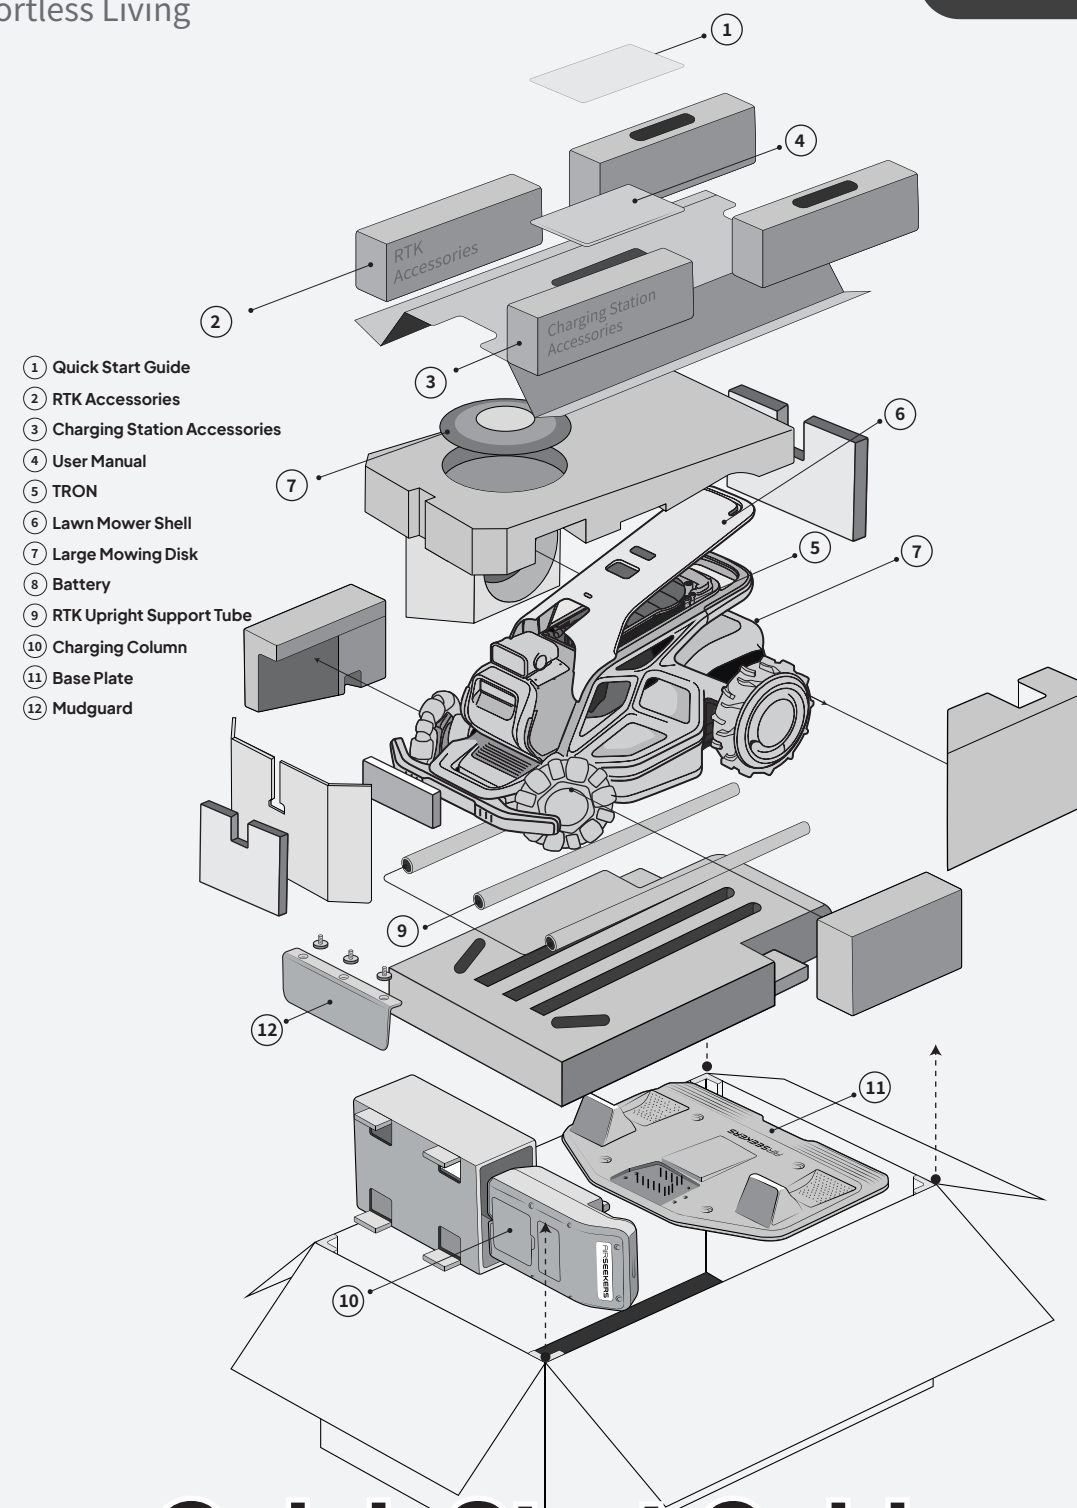


Quick Start Guide

www.airseekers-robotics.com

Here are 3 quick tips to help the lawn mower show off its mulching superpowers:

- 1 For the best mulching results, please pre-cut grass taller than 15cm down to under 6.5cm (feel free to use its rear wheel as a height guide!).

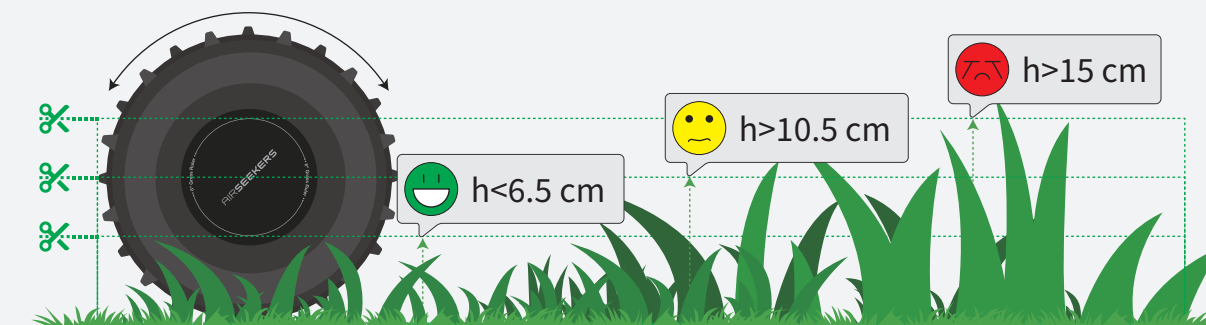

- 2 Wet grass reduces its mulching power, so please wait for a nice, dry day before sending Tron out to work!




- 3 To prevent blade damage, please clear or isolate hidden hard objects like exposed rocks, tree roots, and drain covers beforehand.




01 Charging Station Installation


- 1 Insert the charging column vertically into the socket on the base plate, and secure it to the base plate using the provided screws.

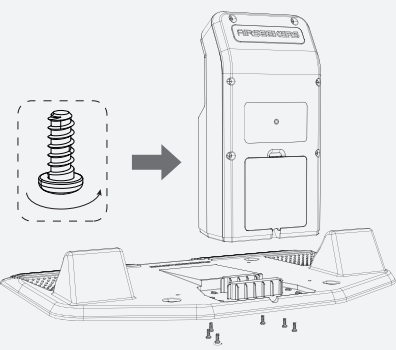


- 2 Place the charging station on a flat surface. Keep the front area of the charging station clear.

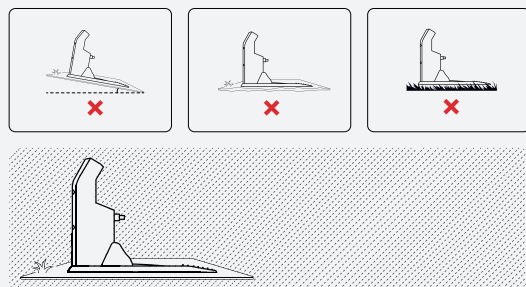

- 3 Fix the assembled charging station to the ground using the ground stakes.

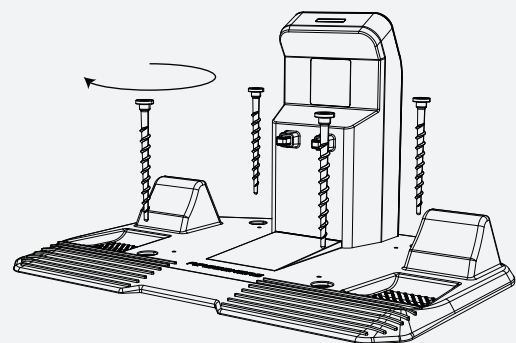

- 4 As shown in the diagram, there are two ports on the back of the charging station — one for the RTK and one for the charging station adapter. Connect the adapter to power the machine.

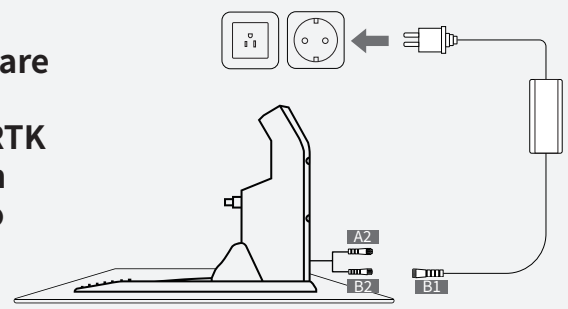

02 Positioning System Setup

Tron needs a high-precision signal to navigate. Please choose your method.



Use Netrtk


No extra hardware installation needed. Simply activate Netrtk in the App and skip the hardware installation guide.




Use RTK Base Station

Note: RTK Base Station is available on select models only. Follow the instructions below to complete the hardware installation first, then pair it in the App.



- 1 Assemble the RTK as shown in the diagram.

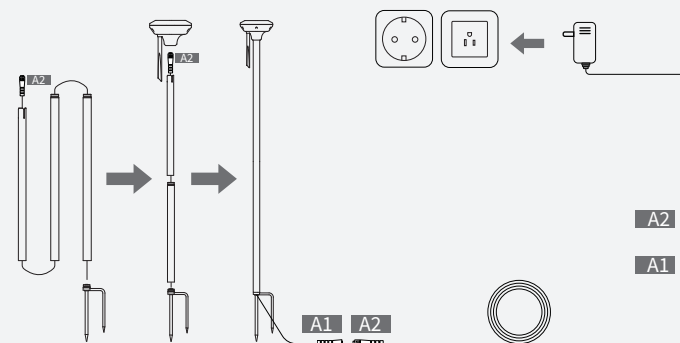

- 2 As shown in the diagram, the RTK can also be powered by connecting it to the charging station.

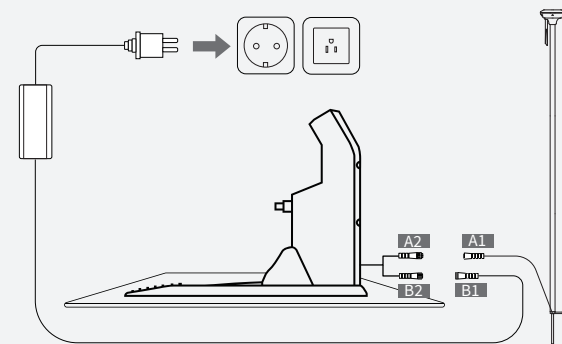

03 RTK Placement Recommendations

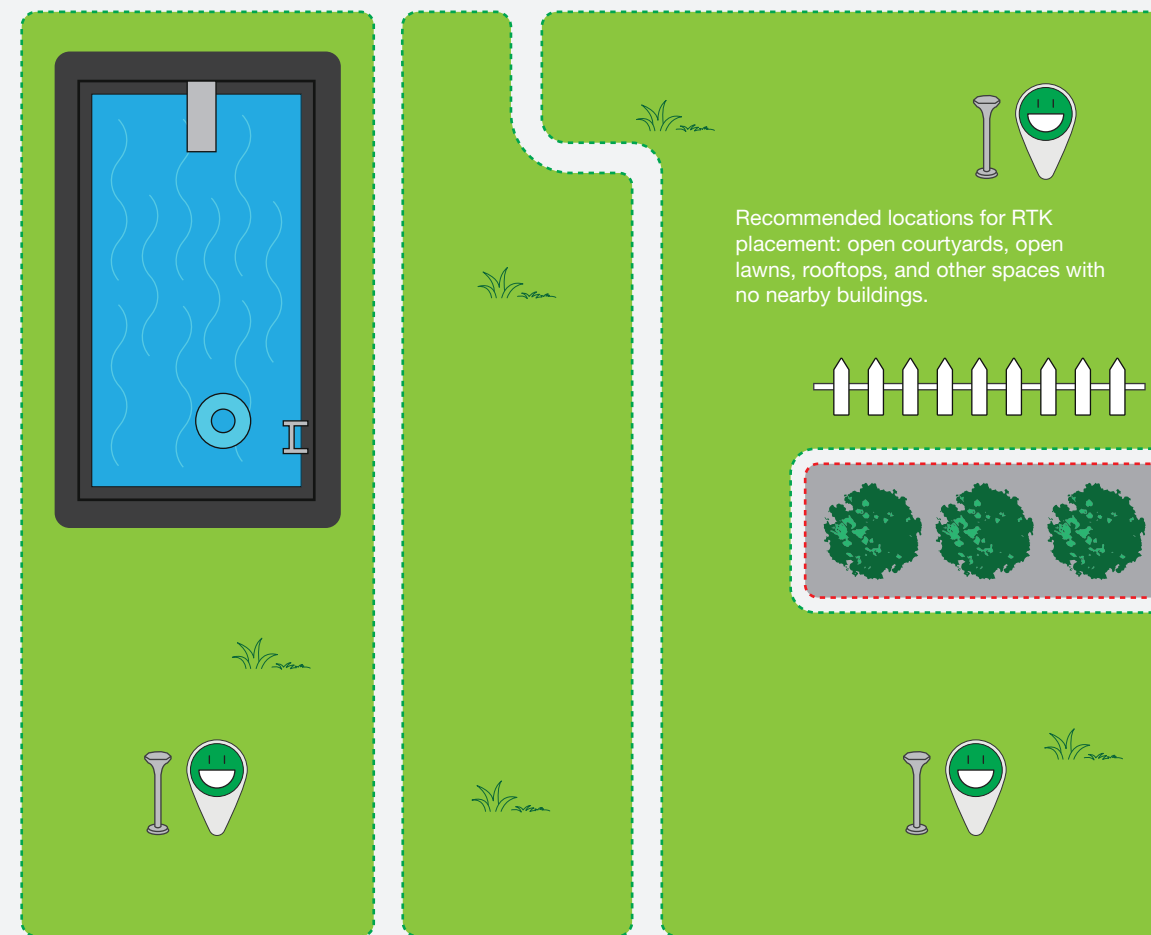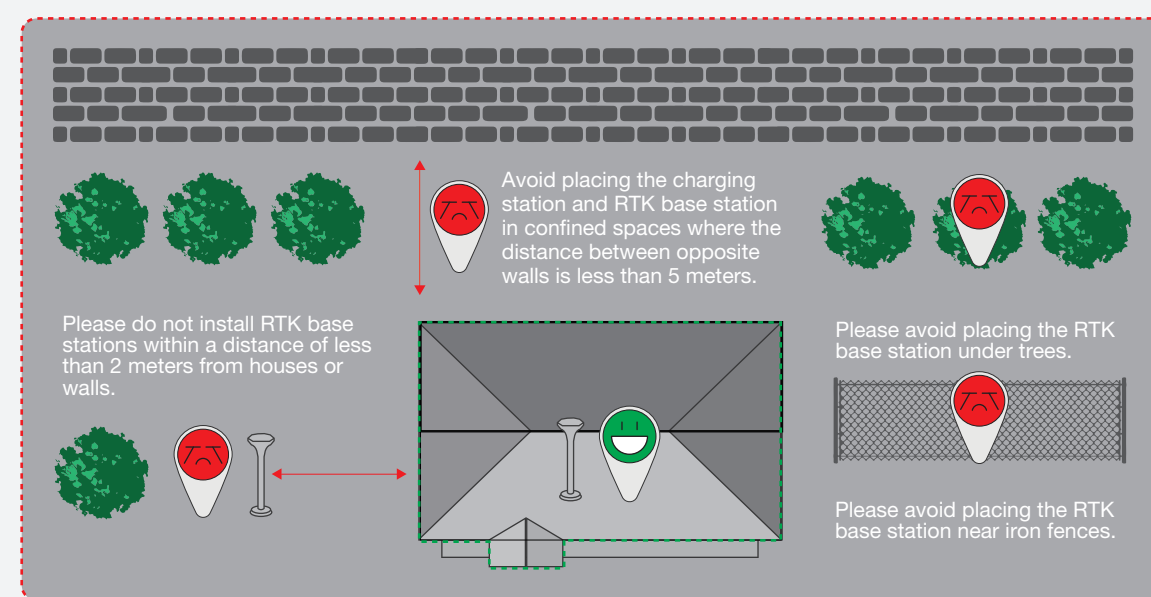

04 Add New Device

1

Download the AIRSEEKERS App



Scan the QR code, or search for "AIRSEEKERS" in the App Store / Google Play to download the App. Install it, create an account, and log in.



2

Start the mower

Press and hold the OK button for 3 seconds.

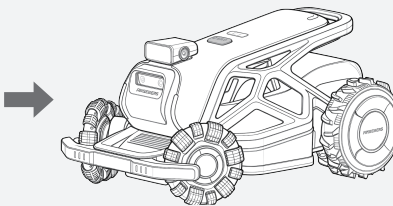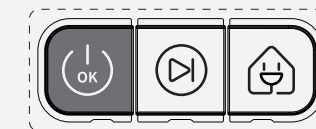

3

Connect the mower to the internet

Check the Important Tips below, then open the App to complete binding and positioning configuration.

