

Operational Guidelines


This product is boundary wire type. Please install the boundary wire first.

ANTHBOT

Lawn Mower Buttons Operation

Step 1


Maintain a minimum 1.5 m/5 ft. straight boundary wire in front and behind of the docking station.

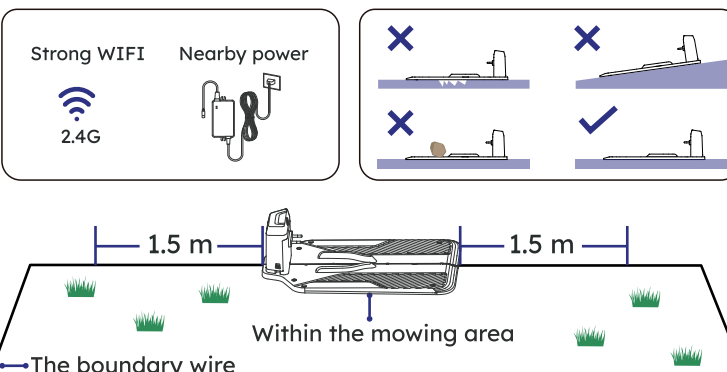

Warning: Please place the docking station on a flat and soft surface to ensure that the 40 cm long metal ground nails can be smoothly inserted into the ground.



Step 2

Peel off the insulation layer of the wire end by 10-15 mm/0.39-0.59 in., and properly insert the boundary wire into the black socket.

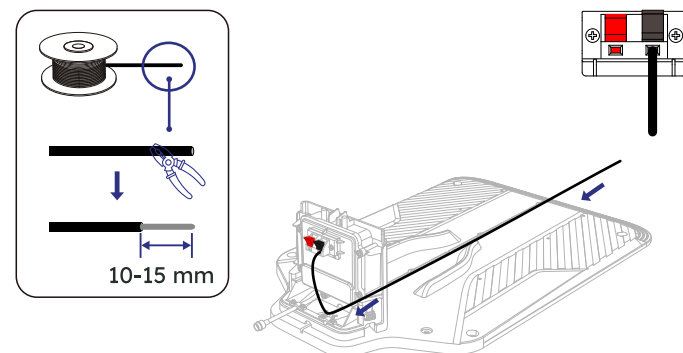

Step 3



To ensure stability, we recommend securing the boundary wire with pegs every 75 cm/2.5 ft.

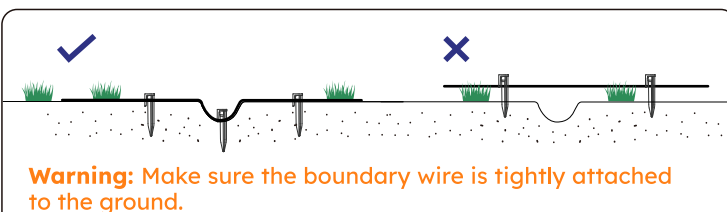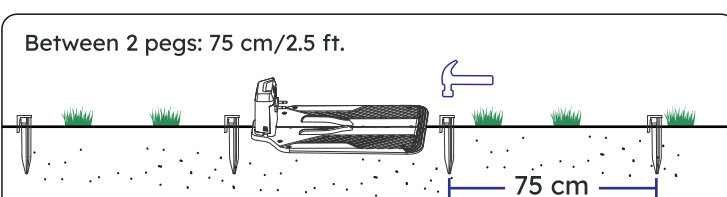

Warning: Make sure the boundary wire is tightly attached to the ground.


Step 4

Peel off the insulation layer of the other wire end by 10-15 mm/0.39-0.59 in., the boundary wire need to be properly inserted into the red socket.

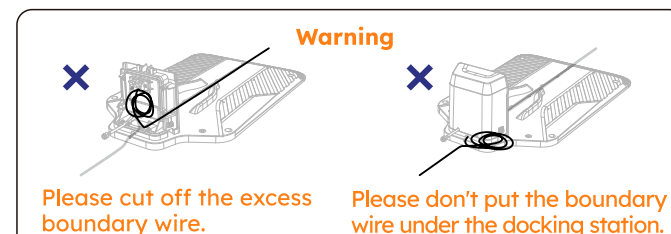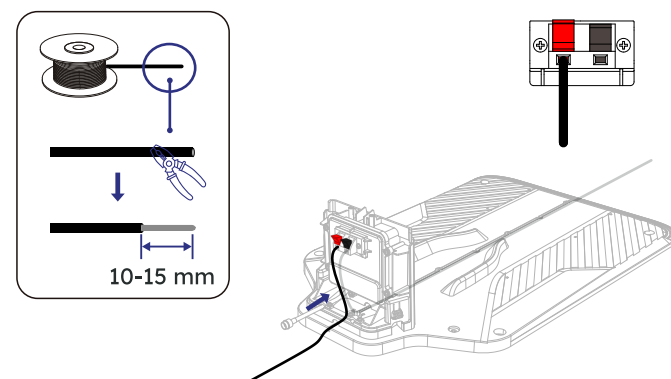


Step 5

Install the back cover to make sure the docking station waterproof.

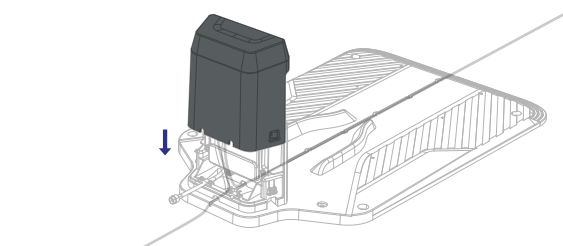


Step 6

Hammer the 2 metal nails into the lawn at the docking station head.

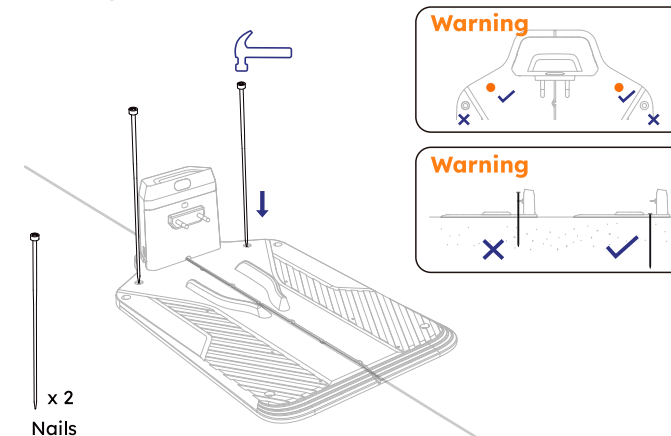


Step 7

Tighten the 4 plastic screws with a hex wrench to secure the station.

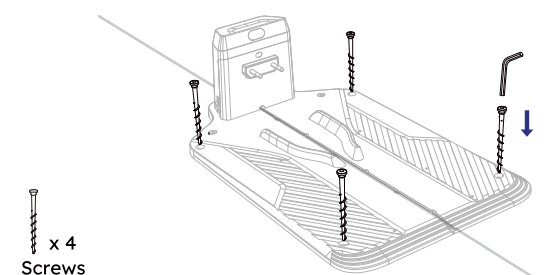

Step 8

Connect the aviation plug at one end of the adapter to the docking station, then connect the adapter to the power supply.

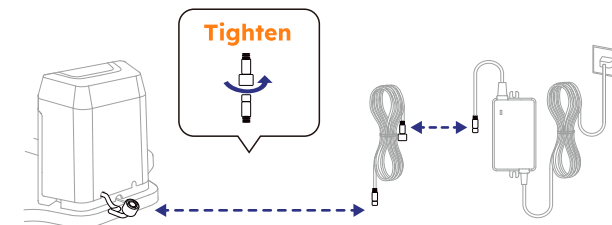

Step 9

If the docking station light is solid white, it indicates that the installation of the boundary wire has been completed.



Step 10

Move the mower onto the docking station and clear away obstacles such as branches on the lawn to prepare for operation.

Download the app



Download on the App Store

Get it on Google Play

Download the ANTHBOT App

ANTHBOT APP can be downloaded from Apple APP Store or Google Play. Or scan the QR code to download and install ANTHBOT APP. Follow the APP prompts to add the device.


Precautions: Please make sure that the WIFI network is 2.4G before adding a device.



Join our FaceBook Group ANTHBOT Group

Step 1

Power on/off

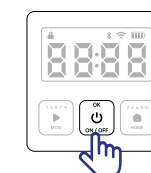


Press and hold 3s

Step 2

Unlock the mower


Enter the 4-digit PIN code to unlock it, the default PIN code is 0000. Click the OK button 4 times to confirm.

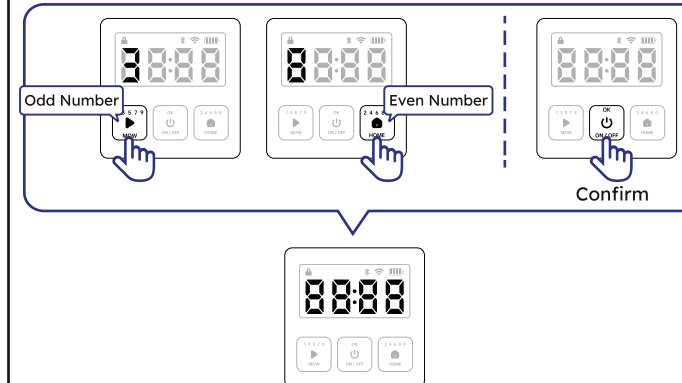


Step 3

Start global mowing

Step 1

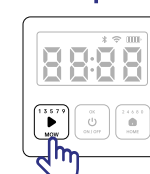

Step 2

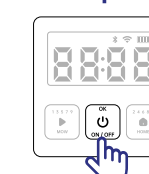

Warning: On error, consult manual for code solutions, then press MOW+OK to start mowing.


Step 4

Mower returns to the docking station

Step 1



Step 2

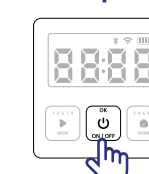


Install The Boundary Wire

The corner should be greater than 90°.

Strong WIFI Nearby power




2.4G

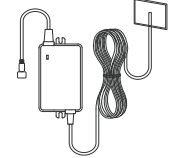

The distance between the two boundary wires at the narrow passage should be greater than 60 cm/24 in.

>60 cm

Wire Connector Connection Guide

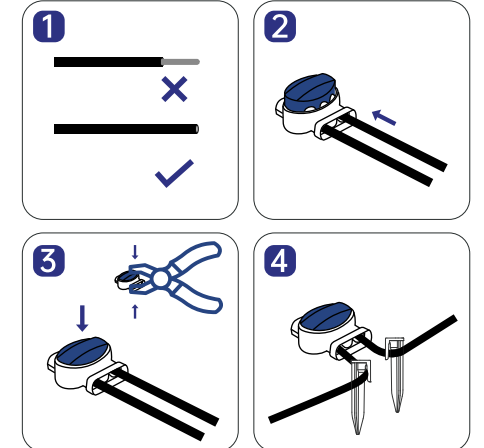

Maintain the wires 35 cm/14 in. away from obstacles higher than 5 cm/2 in.

35 cm

20 cm

The distance between the two parallel wires should be 20 cm/8 in.

The front and back of docking station need to lay at least 1.5 m/5 ft. straight boundary wire.

1.5 m

1.2 m
4 ft.

1.5 m

Maintain the wires at least 75 cm/2.5 ft. away from the pool.


>75 cm

Maintain the wires 10 cm/4 in. away from obstacles below 1 cm/0.39 in.

≤ 10 cm

Maintain the wires 30 cm/12 in. away from obstacles below 5 cm/2 in.

30 cm

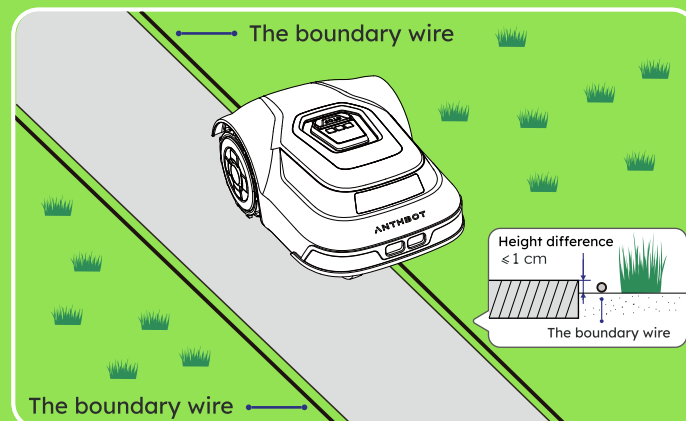

The boundary wire

The boundary wire

Height difference
≤ 1 cm

The boundary wire



More Languages



Video Guide