

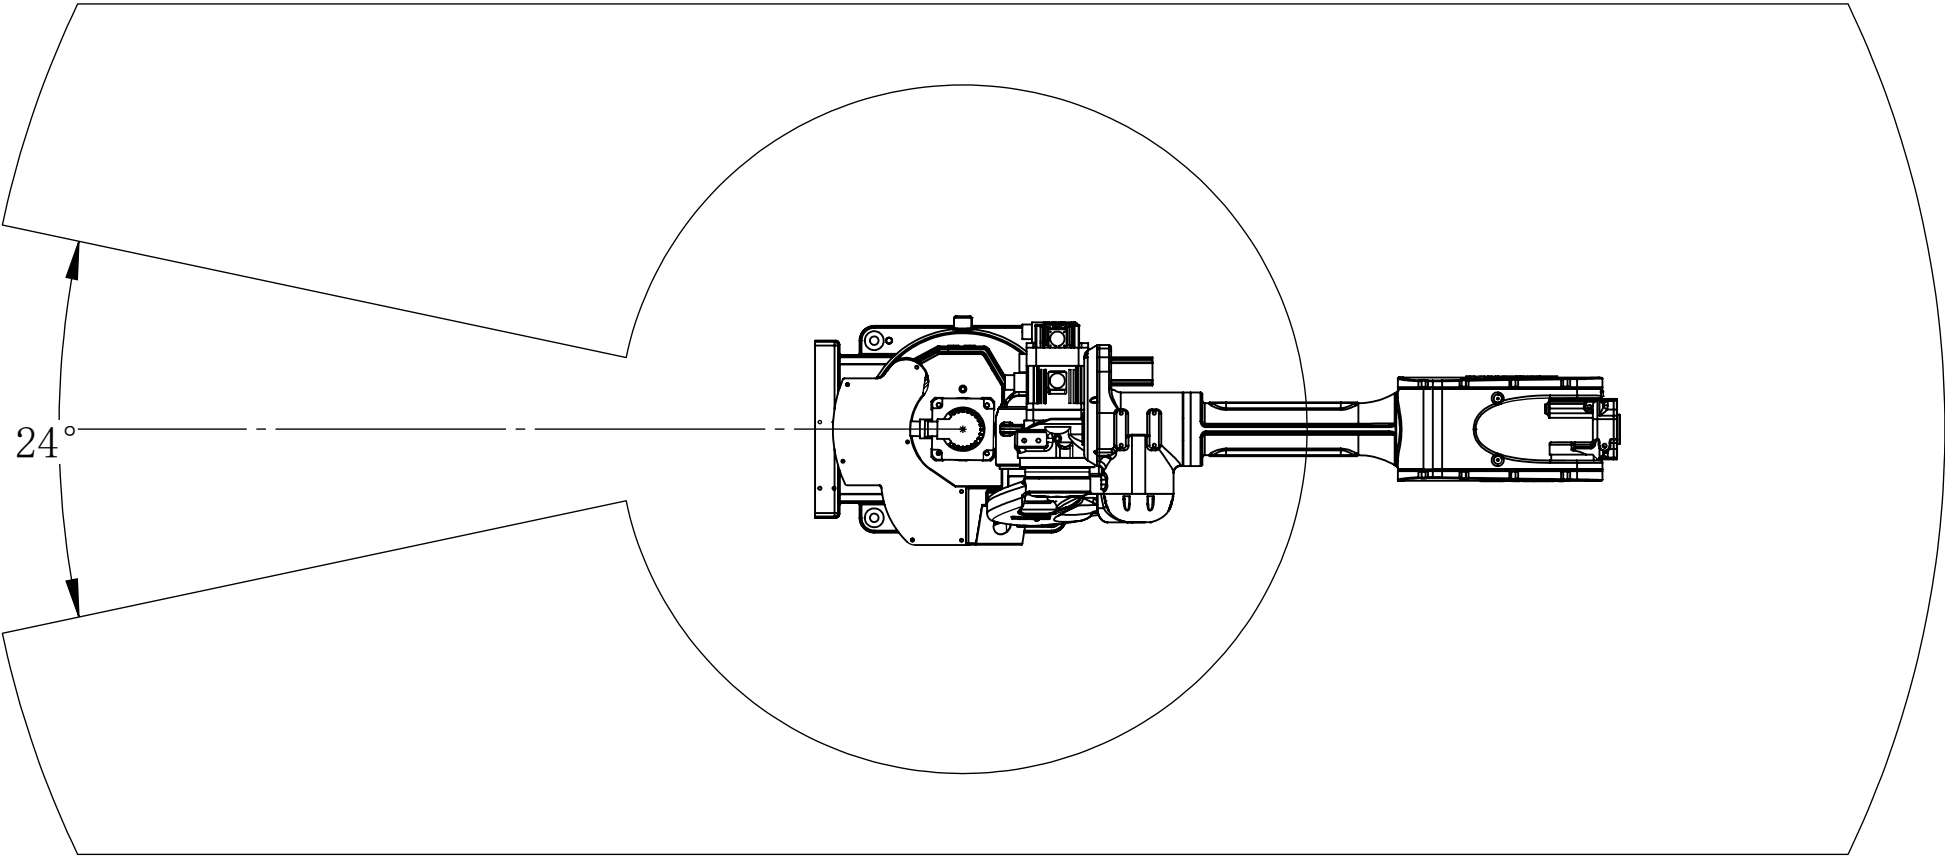
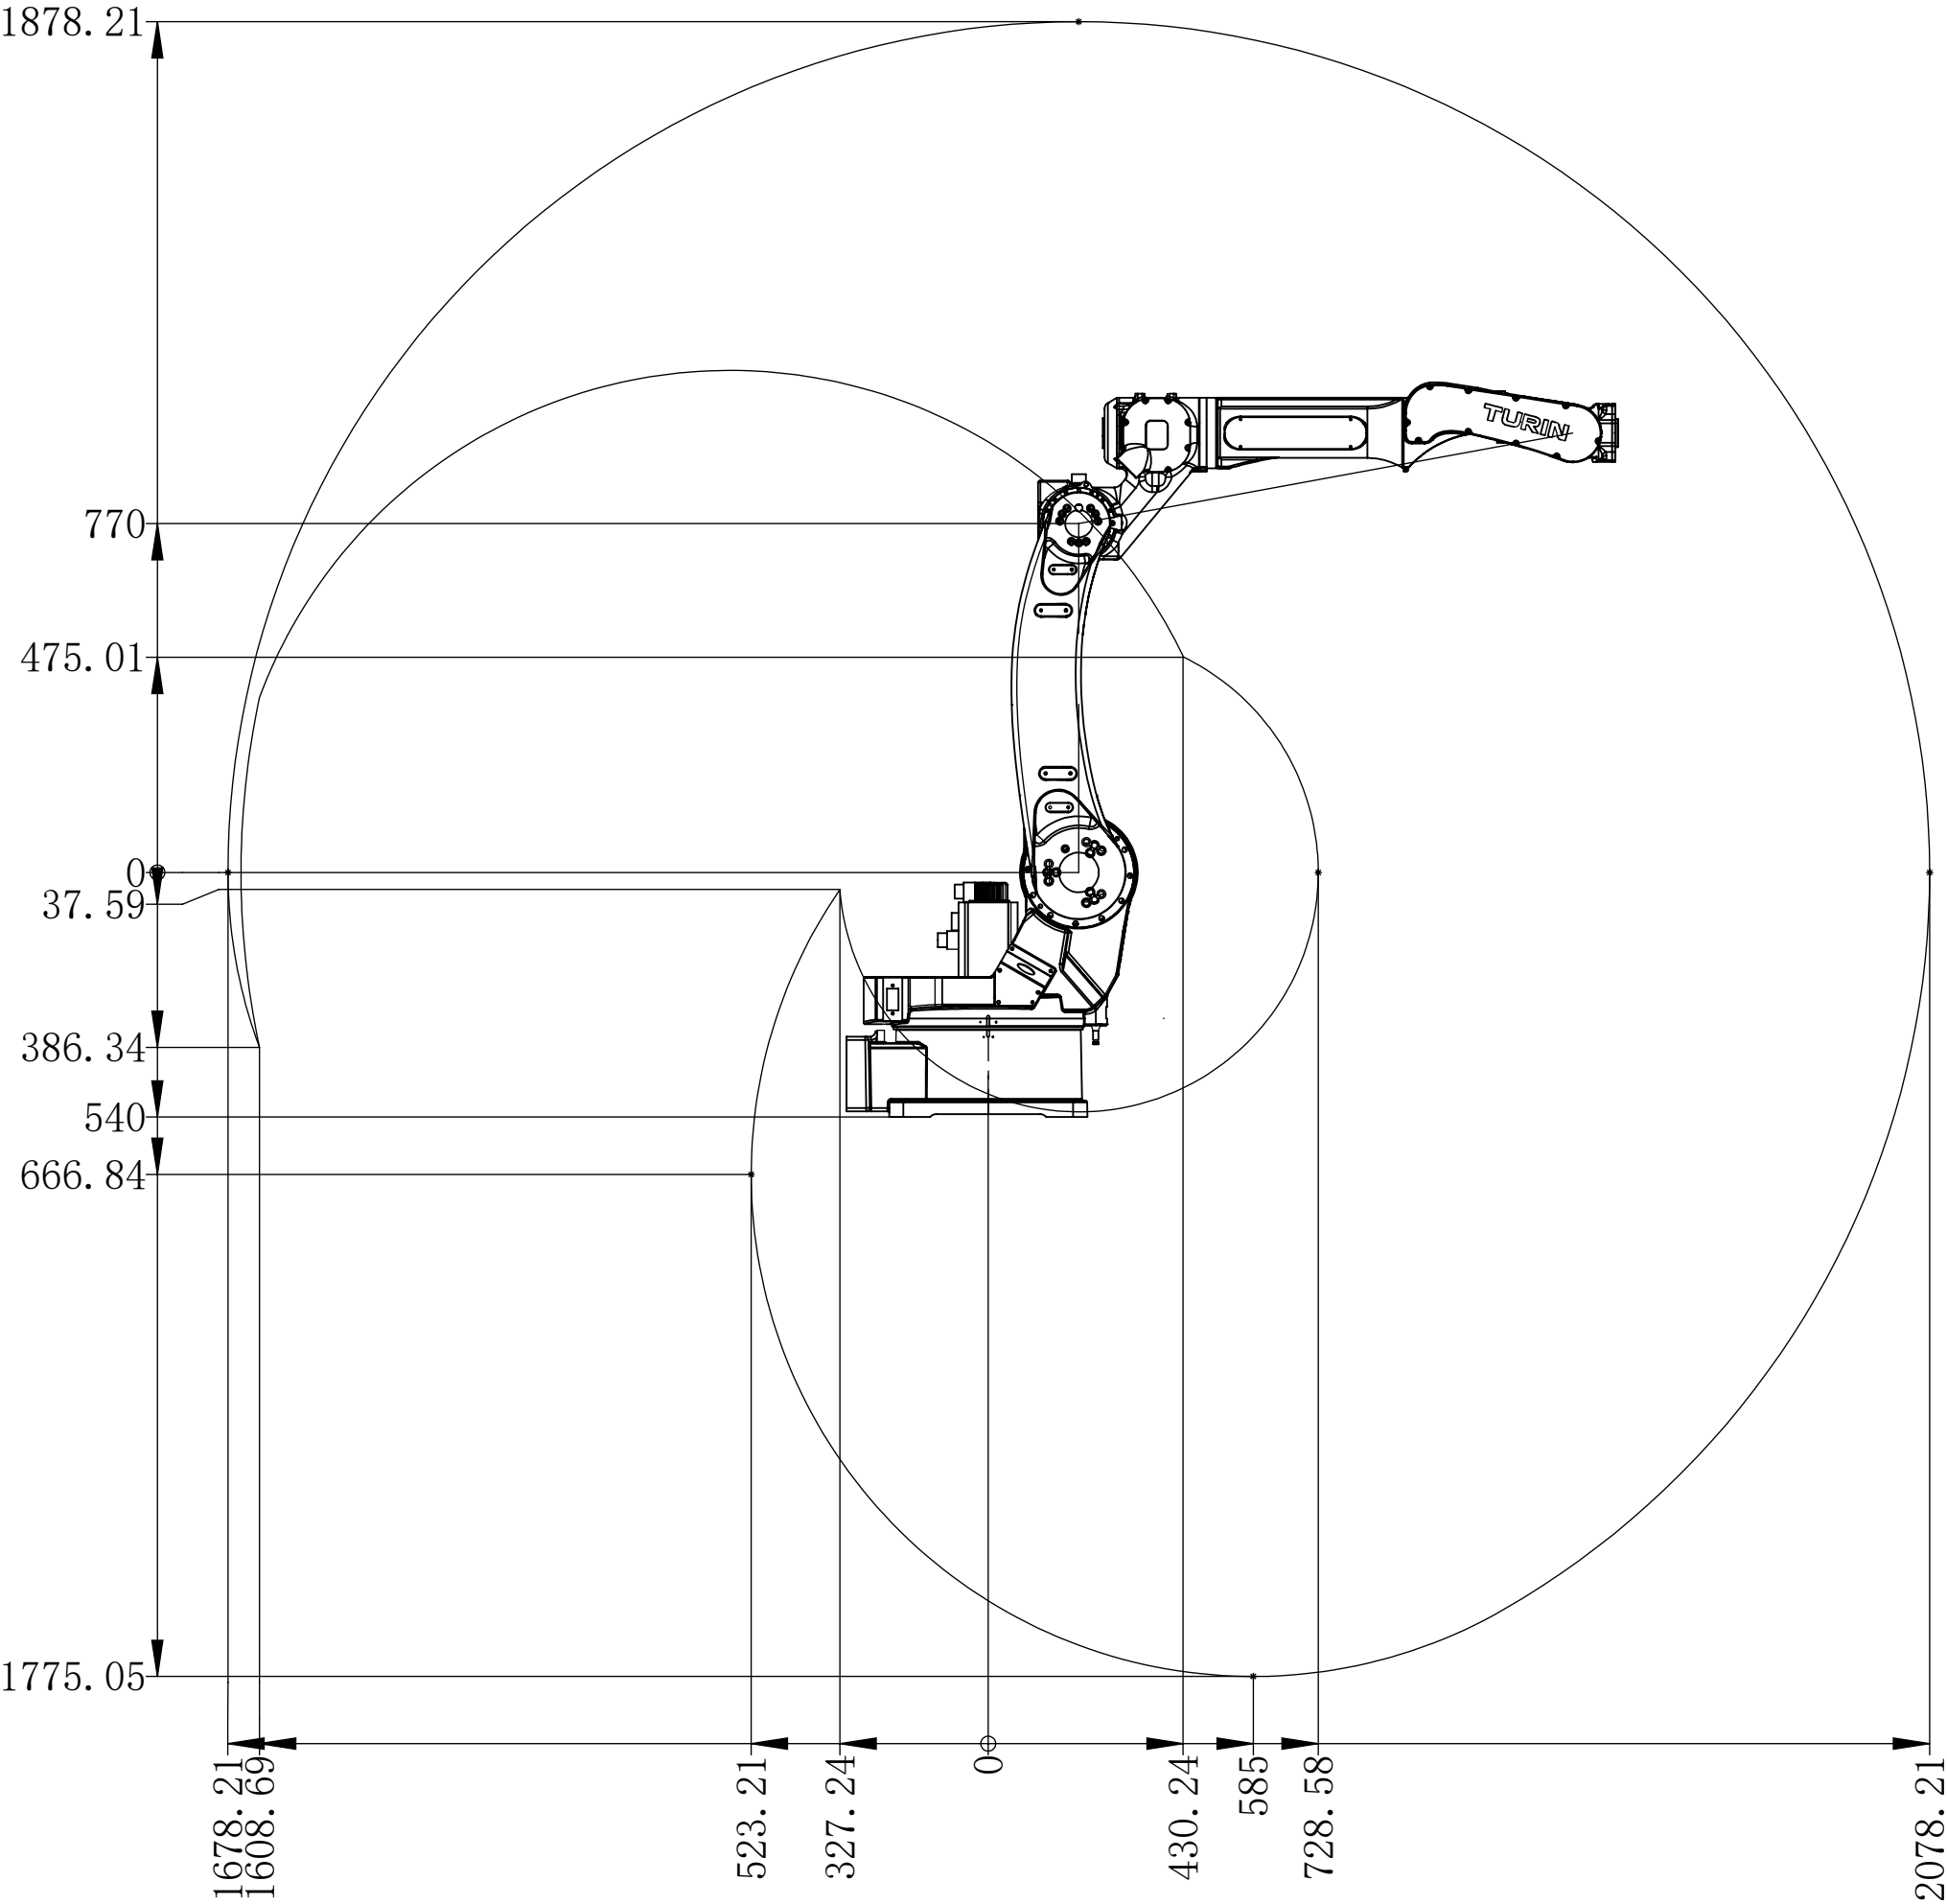
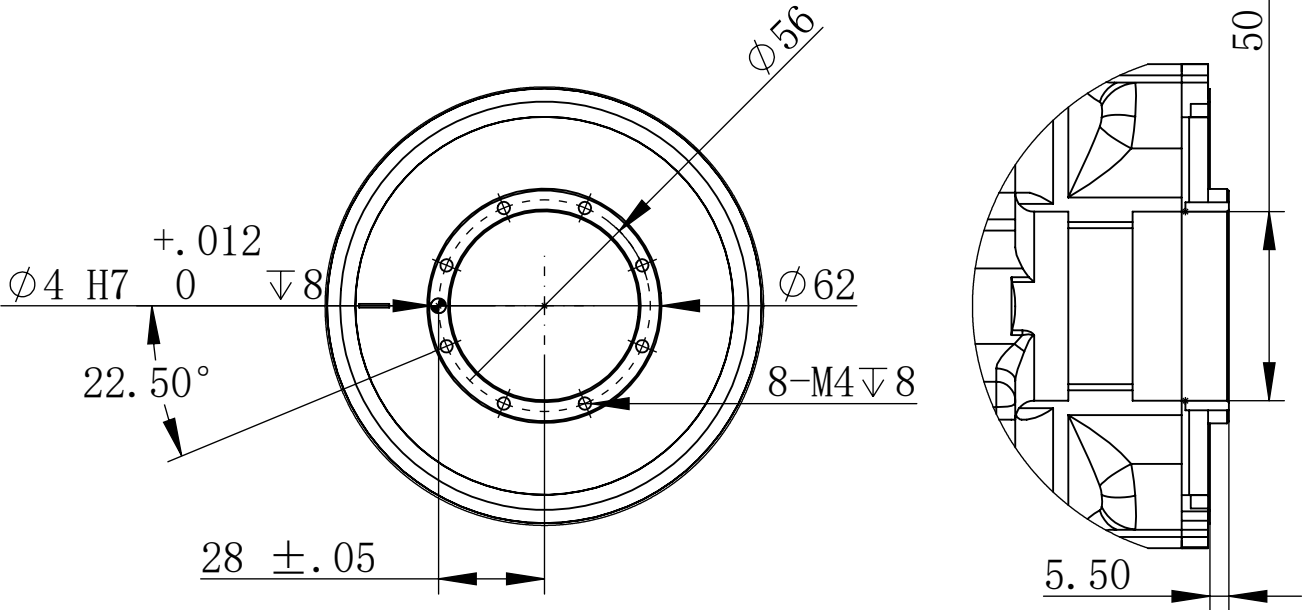
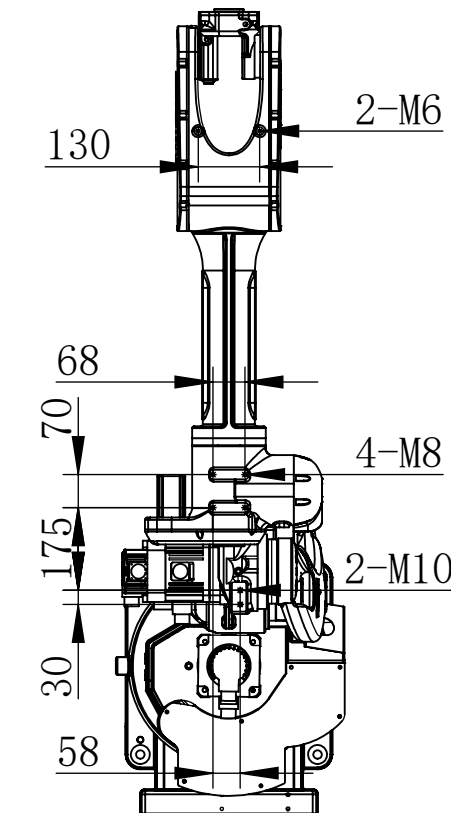


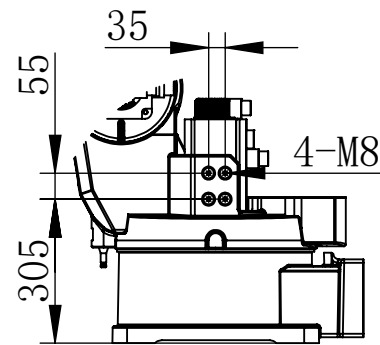


WS16-10
1- $\phi 8$ Pneumatic Tube

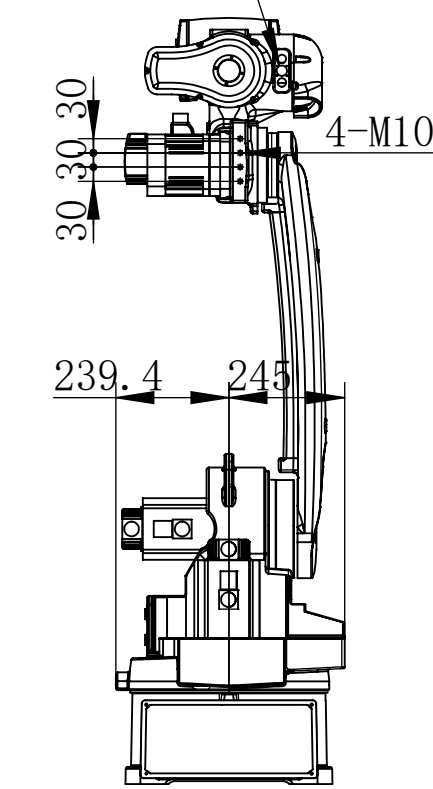

Flange Installation Diagram

2- $\phi 12$ H7 Fully Penetrate

4- $\phi 18$ Penetrate
 $\square \phi 40 \nabla 2.50$

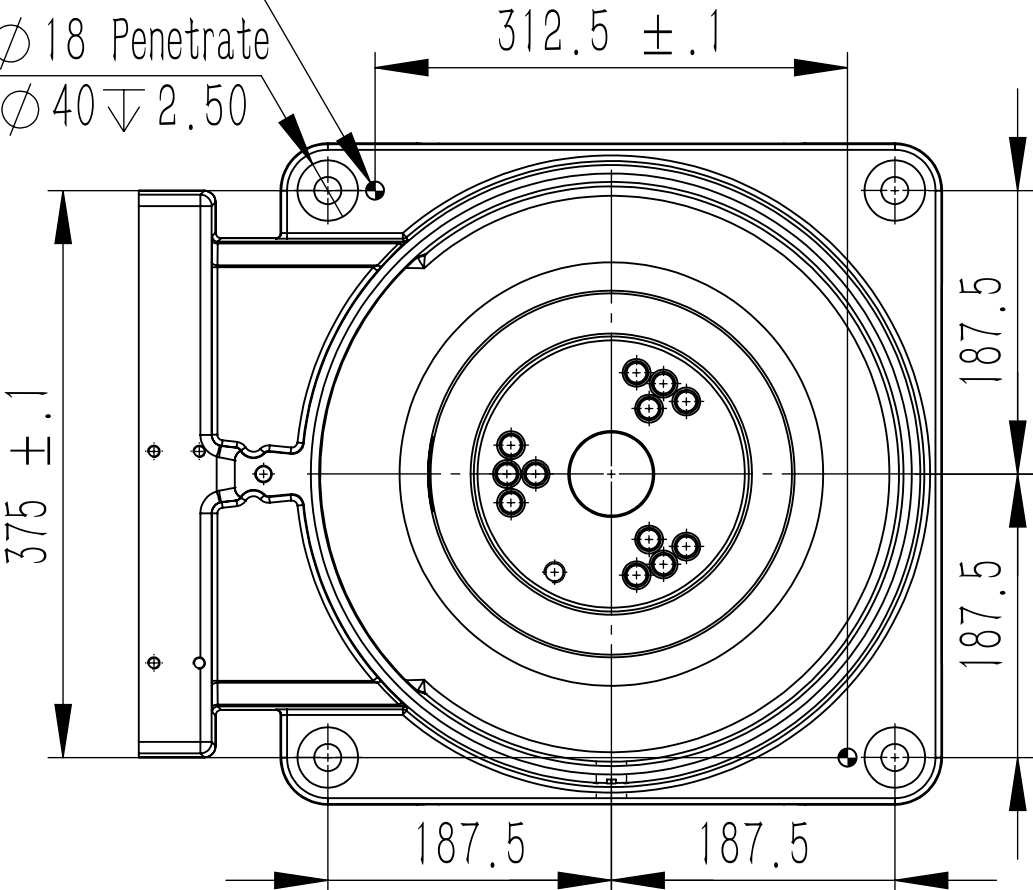

Base Installation Diagram